



*New and Improved!*

# How to Foam Cookie Cutter Dies

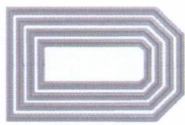

**NOTE:** Outer bands of Nesting Dies do not need ejection foam if there is no interior space in which paper may stick.

step 1

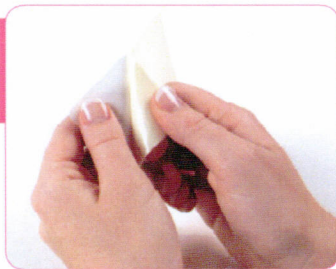

Peel away the backing from a sheet of 4x4 ejection foam to expose the adhesive.

step 2




Place as many dies as possible on the adhesive surface of the foam, design side down. Make sure dies do not overlap. Allow more space around smaller dies (like punctuation and SkinniMini alphabets) for best results.

step 3



Place dies and foam, sticky side down, on the platform of the Revolution entirely within the indentation.

step 4

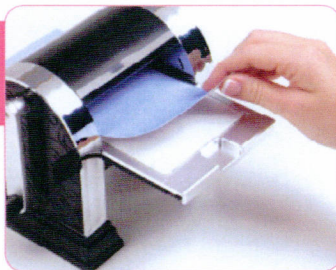

Place a 4-inch wide piece of cardstock over the ejection foam.

step 5




Cover with the standard Revolution cutting mat.

step 6



Spin handle to roll platform through Revolution Tool. Stop when pressure eases.

step 7

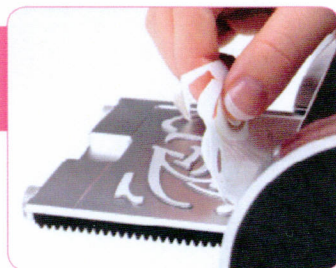

Remove cutting mat, cardstock and foamed dies. Gently peel away excess foam from the platform. Imprints on the Cutting Mat are normal.

**QuicKutz**  
Anytime. Anywhere.

QuicKutz Customer Service  
801.765.1144 or 888.702.1144  
customerservice@quickutz.com  
[www.quickutz.com](http://www.quickutz.com)

Replacement packs of ejection foam are available to purchase.